

### TOTAL SULPHITE (TSO<sub>2</sub>) & FREE SULPHITE (FSO<sub>2</sub>)

### (Manual, Auto-Analyser & Microplate Liquid Stable, Rapid, Format)

### ASSAY PROCEDURE

K-SULPH 02/17

(40 Manual Assays of each per Kit) or(400 Auto-Analyser Assays of each per Kit) or(400 Microplate Assays of each per Kit)



#### **CONTENTS**:

INTRODUCTION PRINCIPLE SPECIFICITY, SENSITIVITY, LINEARITY AND PRECISION INTERFERENCES SAFETY KITS PREPARATION OF REAGENT SOLUTIONS (SUPPLIED) RECOMMENDED REAGENTS (NOT SUPPLIED) EQUIPMENT (RECOMMENDED)	   2 3 3 3 3 4
<b>MANUAL ASSAY PROCEDURES</b> <b>A.</b> MANUAL ASSAY PROCEDURE FOR TOTAL SULPHITE (TSO <sub>2</sub> ) PREPARATION OF THE TSO <sub>2</sub> SINGLE POINT STANDARD CALCULATION OF TSO <sub>2</sub> CONTENT USING A SINGLE POINT TSO <sub>2</sub> STANDARD PREPARATION OF THE TSO <sub>2</sub> CALIBRATION CURVE CALCULATION OF TSO <sub>2</sub> CONTENT USING THE TSO <sub>2</sub> CALIBRATION CURVE	5 6 6 7 7
<b>B</b> . MANUAL ASSAY PROCEDURE FOR FREE SULPHITE (FSO <sub>2</sub> )	10
PREPARATION OF THE FSO <sub>2</sub> SINGLE POINT STANDARD	10
CALCULATION OF FSO <sub>2</sub> CONTENT USING A SINGLE POINT FSO <sub>2</sub> STANDARD	11
PREPARATION OF THE FSO <sub>2</sub> CALIBRATION CURVE	12
CALCULATION OF FSO <sub>2</sub> CONTENT USING THE FSO <sub>2</sub> CALIBRATION CURVE	12
AUTO-ANALYSER ASSAY PROCEDURES	15
A. AUTO-ANALYSER ASSAY PROCEDURE FOR TOTAL SULPHITE (TSO <sub>2</sub> )	15
B. AUTO-ANALYSER ASSAY PROCEDURE FOR FREE SULPHITE (FSO <sub>2</sub> )	16
MICROPLATE ASSAY PROCEDURES	17
EQUIPMENT (RECOMMENDED)	17
A. MICROPLATE ASSAY PROCEDURE FOR TOTAL SULPHITE (TSO <sub>2</sub> )	18
B. MICROPLATE ASSAY PROCEDURE FOR FREE SULPHITE (FSO <sub>2</sub> )	19
SAMPLE PREPARATION	19
1. SAMPLE DILUTION	19
2. SAMPLE CLARIFICATION	20
3. GENERAL CONSIDERATIONS	20
SAMPLE PREPARATION EXAMPLES	21

#### **INTRODUCTION:**

Sulphur dioxide  $(SO_2)$  is used widely as an additive in various forms, most commonly as sulphites (or sulfites), in the wine, beverage and food industries where it acts primarily as an antimicrobial and antioxidant preservative.

During wine making sulphites are used as an essential additive, usually at post-malolactic fermentation, in the control of contamination by *Brettanomyces* during aging and also to protect the wine against detrimental "oxidative and enzymatic browning".  $SO_2$  is only active as an antimicrobial and antioxidant preservative in the unbound "free" form. Given that  $SO_2$  becomes "inactive" when it binds the colour pigments of wine, and with legal restrictions on  $SO_2$  levels in wine, it has become valuable to wine producers to measure both the Free  $SO_2$  (FSO<sub>2</sub>) and Total  $SO_2$  (TSO<sub>2</sub>). In addition to this, due to the increased awareness of the adverse effects of sulphites and the prevalence of sulphite intolerance in some individuals, sulphite levels in foods and drinks are strictly regulated by various governing bodies and therefore there is a requirement for accurate determination of the level of sulphites in foods, beverages and wines.

This kit (**K-SULPH**) is suitable for the specific measurement of both "Total Sulphite" and "Free Sulphite" especially in wines, beverages, foodstuffs and other materials.

#### **PRINCIPLE:**

The Total Sulphite assay is based on the reaction principle between thiol groups and Ellman's reagent.

The Free Sulphite assay is based on the reaction principle of  $SO_2$ , fuchsin and aldehyde binding.

#### SPECIFICITY, SENSITIVITY, LINEARITY AND PRECISION:

#### Total Sulphite (TSO<sub>2</sub>)

Compounds containing free thiols (e.g. cysteine,  $\beta$ -mercaptoethanol and dithiothreitol) can react in the TSO<sub>2</sub> assay.

The smallest differentiating absorbance for the assay is 0.010 absorbance units. This corresponds to a  $TSO_2$  concentration of ~ 2.64 mg/L of sample solution at a sample volume of 0.05 mL. The detection limit is ~ 5.28 mg/L, which is derived from an absorbance difference of 0.020 with a sample volume of 0.05 mL.

The assay is linear over the range of 0.25 to 20  $\mu g$  of TSO<sub>2</sub> per assay. With a sample volume of 0.05 mL, this corresponds to a TSO<sub>2</sub>

concentration of ~ 5 to 400 mg/L of sample solution. In duplicate determinations using one sample solution, an absorbance difference of 0.005 to 0.010 may occur. With a sample volume of 0.05 mL, this corresponds to a TSO<sub>2</sub> concentration of ~ 1.32 to ~ 2.64 mg/L of sample solution. If the sample is diluted during sample preparation, the result is multiplied by the dilution factor, F. If, in sample preparation, the sample is weighed, e.g. 10 g/L, a difference of 0.02 to 0.05 g/100 g can be expected.

#### Free Sulphite (FSO<sub>2</sub>)

The smallest differentiating absorbance for the assay is 0.010 absorbance units. This corresponds to a FSO<sub>2</sub> concentration of  $\sim 1 \text{ mg/L}$  of sample solution at a sample volume of 0.05 mL. The detection limit is  $\sim 2 \text{ mg/L}$ , which is derived from an absorbance difference of 0.020 with a sample volume of 0.05 mL.

The assay is linear over the range of 0.25 to 7.5  $\mu$ g of FSO<sub>2</sub> per assay. With a sample volume of 0.05 mL, this corresponds to a FSO<sub>2</sub> concentration of ~ 5 to 150 mg/L of sample solution. In duplicate determinations using one sample solution, an absorbance difference of 0.005 to 0.010 may occur. With a sample volume of 0.05 mL, this corresponds to a FSO<sub>2</sub> concentration of ~ 0.5 to ~ 1 mg/L of sample solution. If the sample is diluted during sample preparation, the result is multiplied by the dilution factor, F. If, in sample preparation, the sample is weighed, e.g. 10 g/L, a difference of 0.02 to 0.05 g/100 g can be expected.

#### **INTERFERENCES:**

#### Total Sulphite (TSO<sub>2</sub>)

Compounds containing free thiols (e.g. cysteine,  $\beta$ -mercaptoethanol and dithiothreitol) or thiol reactive compounds (e.g. aldehydes and maleimide compounds) can interfere with TSO<sub>2</sub> assay.

Aldehyde levels in wines will not cause interference of the  $\mathsf{TSO}_2$  assay.

#### Free Sulphite (FSO<sub>2</sub>)

Thiol reactive compounds (e.g. aldehydes and maleimide compounds) can interfere with  $FSO_2$  assay.

Endogenous aldehydes in wine are not considered as an interference for the  $FSO_2$  assay for wine samples.

#### SAFETY:

The general safety measures that apply to all chemical substances should be adhered to.

For more information regarding the safe usage and handling of this product please refer to the associated SDS that is available from the Megazyme website.

#### KITS:

Kits suitable for performing 40 assays of each test in manual format (or 400 assays of each test in auto-analyser format or 400 of each test in microplate format) are available from Megazyme. The kits contain the full assay method plus:

Bottle I:	<b>Total Sulphite Reagent I (40 mL)</b> Contains sodium azide (0.05% w/v) as a preservative. Stable for > 18 months at room temperature.
Bottle 2:	<b>Total Sulphite Reagent 2 (20 mL)</b> Contains sodium azide (0.05% w/v) as a preservative. Stable for > 18 months at room temperature.
Bottle 3:	Free Sulphite Reagent I (40 mL) Stable for > 18 months at room temperature.
Bottle 4:	Free Sulphite Reagent 2 (20 mL) Stable for > 18 months at room temperature.
Bottle 5:	<b>Sulphite Standard</b> Sodium Sulphite (5 g). Stable for > 5 years at room temperature.

#### **PREPARATION OF REAGENT SOLUTIONS (SUPPLIED):**

- I 4. Use the contents of bottles I to 4 as supplied.
- 5. Use the contents of bottle 5 as described for the preparation of TSO<sub>2</sub> and FSO<sub>2</sub> standards and calibration curves.

#### **RECOMMENDED REAGENTS (NOT SUPPLIED):**

- I. Citric acid (Sigma cat. no. 251275).
- 2. Sodium Sulphite (Sigma cat. no. 71989).

#### EQUIPMENT (RECOMMENDED):

- I. Disposable plastic cuvettes (I cm light path, 3 mL).
- 2. Micro-pipettors, e.g. Gilson Pipetman<sup>®</sup> (200  $\mu$ L and 1 mL).
- Positive displacement pipettor, e.g. Eppendorf Multipette<sup>®</sup>

   with 25 mL Combitip<sup>®</sup> [to dispense 0.5 mL and 1.0 mL aliquots of reagent solutions (solutions 1-4)].
- 4. Stop clock.
- 5. Analytical balance.
- 6. Spectrophotometer set at 405 nm and 575 nm.
- 7. Vortex mixer (e.g. IKA<sup>®</sup> Yellowline Test Tube Shaker TTS2).
- 8. Whatman No. I (9 cm) filter papers.

#### MANUAL ASSAY PROCEDURES:

#### NOTES:

- The Manual Assay Procedure for TSO<sub>2</sub> or FSO<sub>2</sub> must be performed using either a single point standard or a full calibration curve.
- 2. For each batch of samples that is applied to the determination of  $TSO_2$  or  $FSO_2$  either a single point standard or a calibration curve must be performed concurrently using the same batch of reagents.
- 3. Prepare the  $TSO_2$  or  $FSO_2$  standards for the single point standard or full calibration curve as described for the Manual Assay Procedures for  $TSO_2$  or  $FSO_2$ , respectively.
- The calculation of TSO<sub>2</sub> or FSO<sub>2</sub> content, including the calibration curve analysis, can be simplified by using the Megazyme *Mega-Calc*<sup>™</sup>, downloadable from where the product appears on the Megazyme website (www.megazyme. com).

### A. MANUAL ASSAY PROCEDURE FOR TOTAL SULPHITE (TSO<sub>2</sub>):

Wavelength:	405 nm
Cuvette:	l cm light path (glass or plastic)
Temperature:	~ 25°C
Final volume:	2.55 mL
Sample solution:	0.25-20 μg of SO <sub>2</sub> per cuvette (5-400 mg/L)
-	(in 0.05 mL sample volume)

Read against air (without cuvette in the light path) or against water

Pipette into cuvettes	Sample	Standard	Blank
distilled water (at ~ 25°C) Total Sulphite Reagent I sample standard	1.00 mL 1.00 mL 0.05 mL -	1.00 mL 1.00 mL - 0.05 mL	1.05 mL 1.00 mL - -
Mix <sup>*</sup> and read absorbances of the solutions (A <sub>1</sub> ) after exactly 3 min. Then add:			
Total Sulphite Reagent 2 0.50 mL 0.50 mL 0.50 mL		0.50 mL	
Mix* and read absorbances of the solutions $(A_2)$ after exactly 3 min.			

 $^{\ast}$  for example with a plastic spatula or by gentle inversion after sealing the cuvette with a cuvette cap or Parafilm<sup>®</sup>.

#### **PREPARATION OF THE TSO<sub>2</sub> SINGLE POINT STANDARD:**

### The $\mathsf{TSO}_2$ standard is required for the calculation of $\mathsf{TSO}_2$ in the test samples.

Weigh I g of citric acid into a I L volumetric flask, make to I L with distilled water and dissolve. Accurately add 590 mg of sodium sulphite and dissolve. This is the 300 mg/L standard, use this directly as the single point standard in the Manual Assay Procedure For Total Sulphite (TSO<sub>2</sub>). Prepare on the day of use. Stable for I day at room temperature.

**NOTE:** Alternatively, a full TSO<sub>2</sub> calibration curve can be used and the TSO<sub>2</sub> content calculated as described for "Preparation of the TSO<sub>2</sub> Calibration Curve".

### CALCULATION OF TSO<sub>2</sub> CONTENT USING A SINGLE POINT STANDARD:

Determine the  $\Delta A_{TotalSO_2}$  for the sample, standard and blank. Subtract the  $\Delta A_{TotalSO_2}$  of the blank from that of the sample and the standard, thereby obtaining  $\Delta A_{TotalSO_2}$ -SAMPLE and  $\Delta A_{TotalSO_2}$ -STD, respectively.

The value of  $\Delta A_{TotalSO_2-SAMPLE}$  and  $\Delta A_{TotalSO_2-STD}$  should be at least 0.100 absorbance units to achieve sufficiently accurate results.

The concentration of  $TSO_2$  can be calculated as follows:

$$\Delta A_{\text{TotalSO}_2} = A_2 - A_1$$

$$c = \frac{\Delta A_{\text{TotalSO}_2-\text{SAMPLE}}}{\Delta A_{\text{TotalSO}_2-\text{STD}} / c_{\text{TotalSO}_2-\text{STD}}} \times F \quad [mg/L]$$

#### where:

 $c_{TotalSO_2-STD}$  = concentration of TSO<sub>2</sub> standard (mg/L) F = dilution factor

If the sample is diluted during preparation, the result must be multiplied by the dilution factor, F.

When analysing solid and semi-solid samples which are weighed out for sample preparation, the content (g/100 g) is calculated from the amount weighed as follows:

#### Content of TSO<sub>2</sub>

c<sub>TotalSO2</sub> [g/L sample solution] x 100 [g/100 g] weight<sub>sample</sub> [g/L sample solution]

**NOTE:** These calculations can be simplified by using the Megazyme **Mega-Calc**<sup>™</sup>, downloadable from where the product appears on the Megazyme website (www.megazyme.com).

#### **PREPARATION OF THE TSO<sub>2</sub> CALIBRATION CURVE:**

Weigh I g of citric acid into a I L volumetric flask, make to I L with distilled water and dissolve. Accurately add 787 mg of sodium sulphite and dissolve. This is the 400 mg/L TSO<sub>2</sub> solution. Prepare on the day of use. Stable for I day at room temperature.

Prepare the  $TSO_2$  standard solutions as described in the table below and use directly as standards to determine  $A_2$  in the Manual Assay Procedure For Total Sulphite ( $TSO_2$ ).

#### CALCULATION OF TSO<sub>2</sub> CONTENT USING THE TSO<sub>2</sub> CALIBRATION CURVE:

#### I. TSO<sub>2</sub> CALIBRATION CURVE ANALYSIS:

1. Determine the absorbance (A<sub>2</sub>) of each TSO<sub>2</sub> standard (STD 0-5). Subtract the absorbance of STD 0 from the absorbance of the other standards (STD 1-5), thereby obtaining  $\Delta A_{TotalSO_2}$  (An example is given in Table 1).

Pipette into I3 mL polypropylene tubes	STD 0	STD I	STD 2	STD 3	STD 4	STD 5
(TSO <sub>2</sub> ) mg/L	0	40	80	160	320	400
0.1% (w/v) citric acid (mL)	5.00	4.50	4.00	3.00	1.00	-
TSO <sub>2</sub> solution (mL)	-	0.50	1.00	2.00	4.00	5.00
Total Volume (mL)	5.00	5.00	5.00	5.00	5.00	5.00

2. Calculate M as follows, for each standard (STD 1-5):

$$M = \frac{TSO_2 (mg/L)}{\Delta A_{TotalSO_2}} \qquad [(mg/L)/\Delta A_{TotalSO_2}]$$

3. Calculate the mean M as follows:

mean M = 
$$\frac{(M_{STD1} + M_{STD2} + M_{STD3} + M_{STD4} + M_{STD5})}{5} [(mg/L)/\Delta A_{TotalSO_2}]$$


Use "mean M" to calculate the TSO<sub>2</sub> content of the test samples in section 2 "Total Sulphite (TSO<sub>2</sub>) Content".

#### Example:

Examples of the  $TSO_2$  calibration curve calculations are given in Table I along with a graphical representation of a typical  $TSO_2$  calibration curve (Figure I).

TSO <sub>2</sub> standard	TSO <sub>2</sub> (mg/L)	A <sub>405</sub>	$\Delta \mathbf{A}_{TotalSO_2}$	M [(mg/L)/ ∆A <sub>TSO2</sub> ]
STD 0	0	0.335	0.000	-
STD I	25	0.421	0.085	293.083
STD 2	50	0.516	0.181	276.091
STD 3	100	0.717	0.382	261.986
STD 4	300	1.543	1.208	248.365
STD 5	400	1.991	1.656	241.604
mean M	-	-	-	264.226



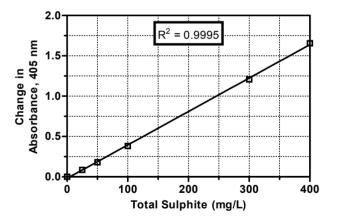

**Figure 1.** Calibration curve demonstrating the linearity of the colourimetric  $TSO_2$  determination by K-SULPH. The sulphite standards were analysed in a cuvette with a 1.0 cm light-path.

### 2. TOTAL SULPHITE (TSO<sub>2</sub>) CONTENT:

Determine the  $\Delta A_{\text{TotalSO}_2}$  for the sample and blank. Subtract the  $\Delta A_{TotalSO_2}$  of the blank from that of the sample, thereby obtaining  $\Delta A_{TotalSO_2}$ -SAMPLE

The value of  $\Delta A_{TotalSO_2-SAMPLE}$  should be at least 0.100 absorbance units to achieve sufficiently accurate results.

The concentration of TSO<sub>2</sub> can be calculated as follows:

$\Delta A_{\text{TotalSo}}$	02	$= A_2 - A_1$
	с	= mean M x F x $\Delta A_{TotalSO_2}$ -SAMPLE [mg/L]
where: mean M F		= mean value of TSO <sub>2</sub> standards [(mg/L)/ $\Delta A_{TotalSO_2}$ ] = dilution factor

If the sample is diluted during preparation, the result must be multiplied by the dilution factor, F.

When analysing solid and semi-solid samples which are weighed out for sample preparation, the content (g/100 g) is calculated from the amount weighed as follows:

#### **Content of TSO**<sub>2</sub>

=

c<sub>TotalSO2</sub> [g/L sample solution] x 100 [g/100 g] weight<sub>sample</sub> [g/L sample solution]

**NOTE:** These calculations, including the calibration curve analysis, can be simplified by using the Megazyme  $Mega-Calc^{TM}$ , downloadable from where the product appears on the Megazyme website (www.megazyme.com).

# **B. MANUAL ASSAY PROCEDURE FOR FREE SULPHITE** (FSO<sub>2</sub>):

Wavelength:	575 nm
Cuvette:	l cm light path (glass or plastic)
Temperature:	~ 25°C
Final volume:	2.55 mL
Sample solution:	0.25-7.50 μg of SO <sub>2</sub> per cuvette (5-150 mg/L)
	(in 0.05 mL sample volume)

Read against air (without cuvette in the light path) or against water

Pipette into cuvettes	Sample	Standard	Blank	
distilled water (at ~ 25°C) Free Sulphite Reagent I sample standard	1.00 mL 1.00 mL 0.05 mL -	1.00 mL 1.00 mL - 0.05 mL	1.05 mL 1.00 mL - -	
Mix <sup>*</sup> and read absorbances of the solutions (A <sub>1</sub> ) after exactly 3 min. Then add:				
Free Sulphite Reagent 2	0.50 mL	0.50 mL	0.50 mL	
Mix <sup>*</sup> and read absorbances of the solutions $(A_2)$ after exactly 3 min.				
Mix <sup>*</sup> and read absorbances of the solutions $(A_3)$ after exactly 3 min.				

\* for example with a plastic spatula or by gentle inversion after sealing the cuvette with a cuvette cap or  $Parafilm^{(R)}$ .

#### **PREPARATION OF THE FSO<sub>2</sub> SINGLE POINT STANDARD:**

### The $\ensuremath{\mathsf{FSO}}_2$ standard is required for the calculation of $\ensuremath{\mathsf{FSO}}_2$ in the test samples.

Weigh I g of citric acid into a I L volumetric flask, make to I L with distilled water and dissolve. Accurately add 196 mg of sodium sulphite and dissolve. This is the 100 mg/L standard, use this directly as the single point standard in the Manual Assay Procedure for Free Sulphite (FSO<sub>2</sub>). Prepare on the day of use. Stable for I day at room temperature.

**NOTE:** Alternatively, a full  $FSO_2$  calibration curve can be used and the  $FSO_2$  content calculated as described for "Preparation of the  $FSO_2$  Calibration Curve".

### CALCULATION OF FSO<sub>2</sub> CONTENT USING A SINGLE POINT STANDARD:

Determine the  $\Delta A_{FreeSO_2}$  for the sample, standard and blank. Subtract the  $\Delta A_{FreeSO_2}$  of the blank from that of the sample and the standard, thereby obtaining  $\Delta A_{FreeSO_2-SAMPLE}$  and  $\Delta A_{FreeSO_2-STD}$ , respectively.

The value of  $\Delta A_{FreeSO_2-SAMPLE}$  and  $\Delta A_{FreeSO_2-STD}$  should be at least 0.100 absorbance units to achieve sufficiently accurate results.

As the reaction between  $FSO_2$  and the aldehyde proceeds, the equilibrium reaction between "bound"  $SO_2$  and  $FSO_2$  shifts towards  $FSO_2$ . With red wine this equilibrium reaction is linear and the concentration of  $FSO_2$  can be calculated as follows:

$$\Delta A_{\text{FreeSO}_2} = (A_2 - A_1) - (A_3 - A_2)$$

$$c = \frac{\Delta A_{\text{FreeSO}_2-\text{SAMPLE}}}{\Delta A_{\text{FreeSO}_2-\text{STD}} / c_{\text{FreeSO}_2-\text{STD}}} \times F \quad [mg/L]$$

#### where:

c<sub>FreeSO2-STD</sub> = concentration of FSO<sub>2</sub> standard (mg/L) F = dilution factor

If the sample is diluted during preparation, the result must be multiplied by the dilution factor, F.

When analysing solid and semi-solid samples which are weighed out for sample preparation, the content (g/100 g) is calculated from the amount weighed as follows:

#### Content of FSO<sub>2</sub>

=

c<sub>FreeSO2</sub> [g/L sample solution] x 100 [g/100 g] weight<sub>sample</sub> [g/L sample solution]

**NOTE:** These calculations can be simplified by using the Megazyme *Mega-Calc*<sup>™</sup>, downloadable from where the product appears on the Megazyme website (www.megazyme.com).

#### **PREPARATION OF THE FSO<sub>2</sub> CALIBRATION CURVE:**

Weigh I g of citric acid into a I L volumetric flask, make to I L with distilled water and dissolve. Accurately add 295 mg of sodium sulphite and dissolve. This is the I50 mg/L FSO<sub>2</sub> solution. Prepare on the day of use. Stable for I day at room temperature.

Prepare the FSO<sub>2</sub> standard solutions as described in the table below and use directly as standards to determine  $A_2$  in the Manual Assay Procedure for Free Sulphite (FSO<sub>2</sub>).

Pipette into I3 mL polypropylene tubes	STD 0	STD I	STD 2	STD 3	STD 4	STD 5
(FSO <sub>2</sub> ) mg/L	0	15	30	60	120	150
0.1% (w/v) citric acid (mL)	5.00	4.50	4.00	3.00	1.00	-
FSO <sub>2</sub> solution (mL)	-	0.50	1.00	2.00	4.00	5.00
Total Volume (mL)	5.00	5.00	5.00	5.00	5.00	5.00

#### CALCULATION OF FSO<sub>2</sub> CONTENT USING THE FSO<sub>2</sub> CALIBRATION CURVE:

#### I. FSO<sub>2</sub> CALIBRATION CURVE ANALYSIS:

1. Determine the absorbance (A<sub>2</sub>) of each FSO<sub>2</sub> standard (STD 0-5). Subtract the absorbance of STD 0 from the absorbance of the other standards (STD 1-5), thereby obtaining  $\Delta A_{FreeSO_2}$  (An example is given in Table 2).

2. Calculate M as follows, for each standard (STD 1-5):

$$M = \frac{FSO_2 (mg/L)}{\Delta A_{FreeSO_2}} \qquad [(mg/L)/\Delta A_{FreeSO_2}]$$

3. Calculate the mean M as follows:

mean M = 
$$\frac{(M_{STD1} + M_{STD2} + M_{STD3} + M_{STD4} + M_{STD5})}{5} [(mg/L)/\Delta A_{FreeSO_2}]$$


Use "mean M" to calculate the FSO<sub>2</sub> content of the test samples in section 2 "Free Sulphite (FSO<sub>2</sub>) Content".

#### Example:

Examples of the FSO<sub>2</sub> calibration curve calculations are given in Table 2 along with a graphical representation of a typical FSO<sub>2</sub> calibration curve (Figure 2).

FSO <sub>2</sub> standard	FSO <sub>2</sub> (mg/L)	A <sub>575</sub> $\Delta A_{FreeSO_2}$		M [(mg/L)/ ∆A <sub>FSO2</sub> ]
STD 0	0	0.132	0.000	-
STD I	25	0.383	0.251	99.761
STD 2	50	0.628	0.496	100.806
STD 3	100	1.104	0.972	102.881
STD 4	125	1.364	1.232	101.469
STD 5	150	1.639	I.507	99.594
mean M	-	-	-	100.893

#### Table 2. Calculations for a typical FSO<sub>2</sub> calibration curve

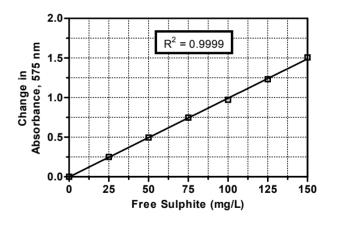

**Figure 2.** Calibration curve demonstrating the linearity of the colourimetric  $FSO_2$  determination by K-SULPH. The sulphite standards were analysed in a cuvette with a 1.0 cm light-path.

#### 2. FREE SULPHITE (FSO<sub>2</sub>) CONTENT:

Determine the  $\Delta A_{FreeSO_2}$  for the sample and blank. Subtract the  $\Delta A_{FreeSO_2}$  of the blank from that of the sample, thereby obtaining  $\Delta A_{FreeSO_2}$ -SAMPLE.

The value of  $\Delta A_{FreeSO_2-SAMPLE}$  should be at least 0.100 absorbance units to achieve sufficiently accurate results.

As the reaction between  $FSO_2$  and the aldehyde proceeds, the equilibrium reaction between "bound"  $SO_2$  and  $FSO_2$  shifts towards  $FSO_2$ . With red wine this equilibrium reaction is linear and the concentration of  $FSO_2$  can be calculated as follows:

$\Delta \mathbf{A}_{\mathrm{FreeSO}_2}$	$= (A_2 - A_1) - (A_3 - A_2)$
c	= mean M x F x $\Delta A_{FreeSO_2}$ -SAMPLE [mg/L]

#### where:

mean M	=	mean value of FSO <sub>2</sub> standards [(mg/L)/ $\Delta A_{FreeSO_2}$ ]
F		dilution factor

If the sample is diluted during preparation, the result must be multiplied by the dilution factor, F.

When analysing solid and semi-solid samples which are weighed out for sample preparation, the content (g/100 g) is calculated from the amount weighed as follows:

#### Content of FSO<sub>2</sub>

= c<sub>FreeSO2</sub> [g/L sample solution] x 100 [g/100 g] weight<sub>sample</sub> [g/L sample solution]

**NOTE:** These calculations, including the calibration curve analysis, can be simplified by using the Megazyme  $Mega-Calc^{TM}$ , downloadable from where the product appears on the Megazyme website (www.megazyme.com).

#### **AUTO-ANALYSER ASSAY PROCEDURES:**

#### NOTES:

- 1. The Auto-Analyser Assay Procedure for TSO<sub>2</sub> or FSO<sub>2</sub> can be performed using either a single point standard or a full calibration curve.
- 2. For each batch of samples that is applied to the determination of  $TSO_2$  or  $FSO_2$  either a single point standard or a calibration curve must be performed concurrently using the same batch of reagents.
- 3. Prepare the TSO<sub>2</sub> or FSO<sub>2</sub> standards for the single point standard or full calibration curve as described for the Manual Assay Procedures for TSO<sub>2</sub> or FSO<sub>2</sub>, respectively.
- 4. To measure FSO<sub>2</sub> the auto-analyser must have a slope correction capability.

### A. AUTO-ANALYSER ASSAY PROCEDURE FOR TOTAL SULPHITE (TSO<sub>2</sub>):

Wavelength:	405 nm
Calculation:	End-point
Temperature:	~ 25°C or 37°C
Reaction:	Absorbance increase
Final volume:	0.255 mL
Linearity:	0.025-2 μg of SO <sub>2</sub> per cuvette (5-400 mg/L)
	(in 0.005 mL sample volume)

Pipette into cuvettes	Sample	Standard	
Total Sulphite Reagent I distilled water sample standard	0.100 mL 0.100 mL 0.005 mL -	0.100 mL 0.100 mL - 0.005 mL	
Read absorbances of the solutions (A <sub>1</sub> ) after exactly 3 min. Then add:			
Total Sulphite Reagent 2	0.050 mL	0.050 mL	
Read absorbances of the solutions $(A_2)$ after exactly 3 min.			

#### CALCULATION FORMULA FOR TSO<sub>2</sub> (AUTO-ANALYSER):

A<sub>2</sub> - A<sub>1</sub>

## B. AUTO-ANALYSER ASSAY PROCEDURE FOR FREE SULPHITE (FSO<sub>2</sub>):

Wavelength:	575 nm
Calculation:	Kinetic
Temperature:	~ 25°C or 37°C
Reaction:	Absorbance increase
Final volume:	0.255 mL
Linearity:	0.025-0.750 μg of SO <sub>2</sub> per cuvette (5-150 mg/L)
	(in 0.005 mL sample volume)

Pipette into cuvettes	Sample	Standard	
Free Sulphite Reagent I distilled water sample standard	0.100 mL 0.100 mL 0.005 mL -	0.100 mL 0.100 mL - 0.005 mL	
Read absorbances of the solutions (A <sub>1</sub> ) after exactly 3 min. Then add:			
Free Sulphite Reagent 2	0.050 mL	0.050 mL	
Read absorbances of the solutions $(A_2)$ after exactly 3 min.			
Read absorbances of the solutions $(A_3)$ after exactly 3 min.			

#### CALCULATION FORMULA FOR FSO<sub>2</sub> (AUTO-ANALYSER):

 $(A_2 - A_1) - (A_3 - A_2)$ 

#### MICROPLATE ASSAY PROCEDURES:

#### NOTES:

- I. The Microplate Assay Procedure for  $TSO_2$  or  $FSO_2$  can be performed using either a single point standard or a full calibration curve.
- 2. For each batch of samples that is applied to the determination of  $TSO_2$  or  $FSO_2$  either a single point standard or a calibration curve must be performed concurrently using the same batch of reagents.
- Prepare the TSO<sub>2</sub> or FSO<sub>2</sub> standards for the single point standard or full calibration curve as described for the Manual Assay Procedures for TSO<sub>2</sub> or FSO<sub>2</sub>, respectively.
- 4. Calculation of TSO<sub>2</sub> or FSO<sub>2</sub> content should be performed as described for the Manual Assay Procedures.
- The calculation of TSO<sub>2</sub> or FSO<sub>2</sub> content, including the calibration curve analysis, can be simplified by using the Megazyme *Mega-Calc*<sup>™</sup>, downloadable from where the product appears on the Megazyme website (www.megazyme. com).

#### **EQUIPMENT (RECOMMENDED):**

- Disposable 96 well polystyrene clear, flat bottom microplates, e.g. Matrix Technologies Corp. cat. no. 4915 (www.matrixtechcorp. com).
- 2. Disposable 25 mL reagent reservoirs, e.g. Matrix Technologies Corp. cat. no. 809311 (www.matrixtechcorp.com).
- 3. Micro-pipettors, e.g. Gilson Pipetman<sup>®</sup> (200  $\mu$ L and I mL) and Multichannel Micro-pipettors, e.g. Gilson Pipetman<sup>®</sup> Ultra 8-channel (1-20  $\mu$ L and 20-300  $\mu$ L).
- 4. Stop clock.
- 5. Analytical balance.
- 6. Microplate shaker, e.g. Heidolph Titramax 100 or 1000 (www. heidolph-instruments.com).
- 7. Microplate reader set at 405 nm or 575 mn.
- 8. Vortex mixer (e.g. IKA<sup>®</sup> Yellowline Test Tube Shaker TTS2).
- 9. Whatman No. I (9 cm) filter papers.

## A. MICROPLATE ASSAY PROCEDURE FOR TOTAL SULPHITE (TSO<sub>2</sub>):

Wavelength:	405 nm
Microplate:	96-well (e.g. clear flat-bottomed, glass or plastic)
Temperature:	~ 25°C or 37°C
Final volume:	0.255 mL
Linearity:	0.025-2.00 µg of SO <sub>2</sub> per cuvette (5-400 mg/L)
	(in 0.005 mL sample volume)

Read against air (without cuvette in the light path) or against water

Pipette into cuvettes	Sample	Standard	Blank
distilled water (at ~ 25°C) Total Sulphite Reagent I sample standard	0.100 mL 0.100 mL 0.005 mL -	0.100 mL 0.100 mL - 0.005 mL	0.105 mL 0.100 mL - -
Mix* and read absorbances of the solutions (A <sub>1</sub> ) after exactly 3 min. Then add:			
Total Sulphite Reagent 2	0.050 mL	0.050 mL	0.050 mL
Mix* and read absorbances of the solutions $(A_2)$ after exactly 3 min.			

 $^{*}$  for example using microplate shaker, shake function on a microplate reader or repeated aspiration (e.g. using pipettor set at 50-100  $\mu L$  volume).

### B. MICROPLATE ASSAY PROCEDURE FOR FREE SULPHITE (FSO<sub>2</sub>):

Wavelength:	575 nm
Microplate:	96-well (e.g. clear flat-bottomed, glass or plastic)
Temperature:	~ 25°C or 37°C
Final volume:	0.255 mL
Linearity:	0.025-0.750 μg of SO <sub>2</sub> per cuvette (5-150 mg/L)
	(in 0.005 mL sample volume)

Read against air (without cuvette in the light path) or against water

Pipette into cuvettes	Sample	Standard	Blank
distilled water (at ~ 25°C) Free Sulphite Reagent I sample standard	0.100 mL 0.100 mL 0.005 mL -	0.100 mL 0.100 mL - 0.005 mL	0.105 mL 0.100 mL - -
Mix <sup>*</sup> and read absorbances of the solutions (A <sub>1</sub> ) after exactly 3 min. Then add:			
Free Sulphite Reagent 2	0.050 mL	0.050 mL	0.050 mL
Mix <sup>*</sup> and read absorbances of the solutions $(A_2)$ after exactly 3 min.			
Mix <sup>*</sup> and read absorbances of the solutions $(A_3)$ after exactly 3 min.			

 $^{*}$  for example using microplate shaker, shake function on a microplate reader or repeated aspiration (e.g. using pipettor set at 50-100  $\mu L$  volume).

#### SAMPLE PREPARATION:

#### I. Sample dilution.

The amount of TSO<sub>2</sub> or FSO<sub>2</sub> present in the cuvette (i.e. in the 0.05 mL of sample being analysed) should range between 0.25 and 20  $\mu$ g for TSO<sub>2</sub> and 0.25 and 7.5  $\mu$ g for FSO<sub>2</sub>. The sample solution must therefore be diluted sufficiently to yield a concentration between 5 and 400 mg/L for TSO<sub>2</sub> and 5 and 150 mg/L for FSO<sub>2</sub>.

#### Dilution table (TSO<sub>2</sub>)

Estimated concentration of TSO <sub>2</sub> (mg/L)	Dilution with water	Dilution factor (F)
< 400	No dilution required	
400-4000	+ 9	0
> 4000	+ 99	00

### Dilution table (FSO<sub>2</sub>)

Estimated concentration of FSO <sub>2</sub> (mg/L)	Dilution with water	Dilution factor (F)
< 120	No dilution required	
120-1200	+ 9	0
> 1200	+ 99	00

If the value of  $\Delta A_{TotalSO_2}$  or  $\Delta A_{FreeSO_2}$  is too low (e.g. < 0.100), weigh out more sample or dilute less strongly.

#### 2. Sample clarification.

#### a. Solutions:

**Carrez I solution.** Dissolve 3.60 g of potassium hexacyanoferrate (II)  $\{K_4[Fe(CN)_6], 3H_2O\}$  (Sigma cat. no. P9387) in 100 mL of distilled water. Store at room temperature.

**Carrez II solution.** Dissolve 7.20 g of zinc sulphate  $(ZnSO_4.7H_2O)$  (Sigma cat. no. Z4750) in 100 mL of distilled water. Store at room temperature.

**Sodium hydroxide (NaOH, 100 mM).** Dissolve 4 g of NaOH in I L of distilled water. Store at room temperature.

#### b. Procedure:

Pipette the liquid sample into a 100 mL volumetric flask which contains approx. 60 mL of distilled water, or weigh sufficient quantity of the sample into a 100 mL volumetric flask, and add 60 mL of distilled water. Carefully add 5 mL of Carrez I solution, 5 mL of Carrez II solution and 10 mL of NaOH solution (100 mM). Mix after each addition. Fill the volumetric flask to the mark, mix and filter.

#### 3. General considerations.

(a) Liquid samples: clear, slightly coloured and approximately neutral, liquid samples can be used directly in the assay.

(b) Acidic samples: if > 0.1 mL of an acidic sample is to be used undiluted (such as red wine or coloured fruit juice), the pH of the solution should be increased to approx. 7.4 using 2 M NaOH, and the solution incubated at room temperature for 30 min.

(c) **Carbon dioxide:** samples containing carbon dioxide should be degassed by increasing the pH to approx. 7.4 with 2 M NaOH and gentle stirring, or by stirring with a glass rod.

(d) **Strongly coloured samples:** if used undiluted, strongly coloured samples should be treated by the addition of 0.2 g of polyvinylpolypyrrolidone (PVPP)/10 mL of sample. Shake the tube vigorously for 5 min and then filter through Whatman No. I filter paper.

(e) **Solid samples:** homogenise or crush solid samples in distilled water and filter if necessary.

(f) Samples containing fat: extract such samples with hot water at a temperature above the melting point of the fat, e.g. in a 100 mL volumetric flask at 60°C. Adjust to room temperature and fill the volumetric flask to the mark with distilled water. Store on ice or in a refrigerator for 15-30 min and then filter. Discard the first few mL of filtrate and use the clear supernatant (which may be slightly opalescent) for assay.

(g) Samples containing protein: deproteinise samples containing protein with Carrez reagents, alternatively use ice cold perchloric acid. Add an equal volume of ice-cold I M perchloric acid with mixing. Filter or centrifuge at 1,500 g for 10 min and adjust the pH of the supernatant to between 7 and 8 with I M KOH. Use the supernatant in the assay after appropriate dilution.

#### SAMPLE PREPARATION EXAMPLES:

#### (a) Determination of $TSO_2/FSO_2$ in white wine.

The  $TSO_2/FSO_2$  concentrations of white wine can generally be determined without any sample treatment (except dilution according to the dilution table). *Typically, no dilution is required and a sample volume of 0.05 mL is satisfactory.* 

#### (b) Determination of TSO<sub>2</sub>/FSO<sub>2</sub> in red wine.

The  $TSO_2/FSO_2$  concentrations of red wine can generally be determined without any sample treatment (except dilution according to the dilution table). *Typically, a dilution of 1:2 and sample volume of 0.05 mL are satisfactory.* 

#### (c) Determination of TSO<sub>2</sub>/FSO<sub>2</sub> in beer.

After removal of carbon dioxide by stirring with a glass rod, dilute the sample according to the dilution table and analyse. *Typically, no dilution is required and a sample volume of 0.05 mL is satisfactory.* 

#### (d) Determination of $TSO_2/FSO_2$ in fruit juice.

Dilute the sample to yield a  $TSO_2$  or  $FSO_2$  concentration of less than 400 mg/L or 150 mg/L, respectively (see dilution table). Clear, neutral solutions can generally be determined without any sample

treatment (except dilution). Turbid liquids generally only require centrifuging or filtering before the dilution step. Coloured solutions are usually suitable for analysis after dilution to an appropriate  $TSO_2$ or  $FSO_2$  concentration. However, if coloured solutions require analysis undiluted, they may need decolourising as follows: adjust 25 mL of liquid sample to approx. pH 7.4 with 1 M NaOH and increase the volume to 50 mL with distilled water. Add 0.5 g of PVPP, stir for 5 min and filter through Whatman No. 1 filter paper or centrifuge. Use the clear, slightly coloured filtrate or supernatant directly in the assay. *Typically, no dilution is required and a sample volume of 0.05 mL is satisfactory.* 

#### (e) Determination of $TSO_2/FSO_2$ in potatoes.

Mince approx. 50 g of potato with 50 mL of IM potassium phosphate buffer (pH 4) and 0.1 mL of *n*-octanol (to minimise foaming) with a household mixer for approx. I min. Adjust to approximately pH 4 with 2 M KOH. Quantitatively transfer the mixture to a 500 mL volumetric flask with distilled water, fill up to mark with distilled water, mix and filter through Whatman No. I filter paper or centrifuge. *Typically, no dilution is required and a sample volume of* 0.05 mL is satisfactory.



#### WITHOUT GUARANTEE

The information contained in this booklet is, to the best of our knowledge, true and accurate, but since the conditions of use are beyond our control, no warranty is given or is implied in respect of any recommendation or suggestions which may be made or that any use will not infringe any patents.